


1. Unpack the luminaire.



2. Unscrew the adapter.




3. Place the adapter at the desired mounting location and mark the attachment points – 4 spots.

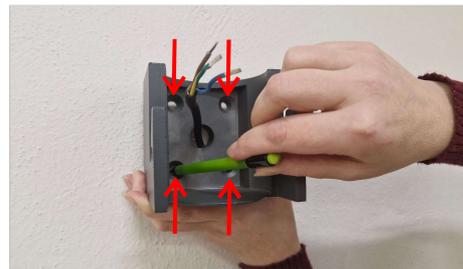

4. Drill 4 holes. Use appropriate fasteners for securing (not included).



5. Feed the supply cable through the central hole of the adapter and secure the adapter with screws.

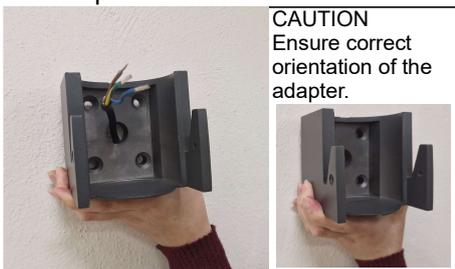

6. Slide the luminaire onto the adapter while simultaneously feeding the cable through the gland.



7. Secure the luminaire to the adapter. Tightening torque: 6 Nm.




10. Open the luminaire by releasing the clip.



11. Strip the end of the cable (7 cm) and the ends of the conductors (1 cm).



13. Connect the conductors to the disconnect terminal block. Secure the supply cable using the provided cable tie.

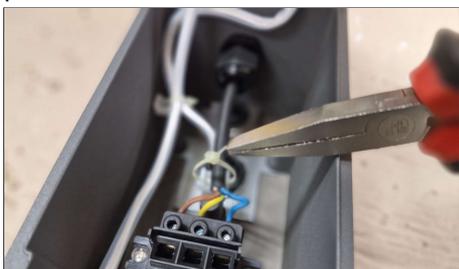

14. Tighten the cable gland.



15. Close the luminaire by pressing the cover down. Ensure the clip snaps into place correctly.



16. Unscrew the 2 screws from the top of the luminaire.





17. Secure the luminaire cover with screws.





## LUPA W

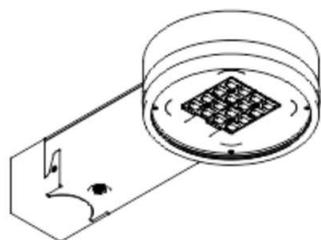
 $A_{w\downarrow} = 0,07 \text{ m}^2$ 

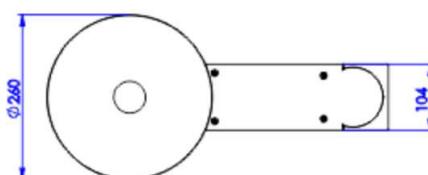 $A_{w\downarrow} = 0,074 \text{ m}^2$ 

 = 7,5 kg


Recommended installation height  
up to 8 meters.

- The installation of luminaires is possible at ambient air temperatures exceeding 5°C; at lower temperatures, the installation of luminaires is not recommended due to the susceptibility of cables, wires, and other components to brittleness.
- The installation of luminaires under adverse weather conditions such as rain, snowfall, etc., is not recommended due to the risk of moisture or water entering the luminaires.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- The light sources in this luminaire is only replaceable by the manufacturer or their technicians or a qualified person.

**- Caution, risk of electric shock**



- Do not look directly or with optical aids into the light source RG1 d > 0,5 m
- This luminaire operates at mains voltage 220-240V, 50-60 Hz.
- Any modification to this luminaire is forbidden.
- Replace any cracked protective shield.

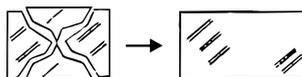

**Cleaning:**

clean the luminaire with the standard detergents. DO NOT use any abrasive detergents or solvents.

**Installation and maintenance:**

can provide only a person with an electrical qualification.

**ELEKTRO-LUMEN, s. r. o.**  
Hranická 505  
753 61 Hranice IV - Drahotuše  
Česká republika

**Telefon:** +420 581 699 411  
**Fax:** +420 581 699 419  
**E-mail:** el-lumen@el-lumen.cz  
**Web:** www.el-lumen.cz

